

Excellent solution for anyone who needs to refill forklift truck batteries.



It consists of a demineralizer that purifies tap water, a collection container with tap, and a dispensing device that feeds demineralized water directly into the battery.

A manual refilling gun can be connected to the outlet for batteries with traditional caps, or a quick coupling for batteries with centralized refilling systems.

INSTRUCTIONS

1. Connect the refilling system to the water tap.
2. The demineralized water will flow directly into the container; check the filling level.
3. Once the maximum level of the container has been reached, disconnect the water inlet fitting.
4. Connect the female coupling to the battery refilling system. Open the container tap.
5. The water flow is indicated by the flow indicator.