

The simplest system for topping up batteries: economical and functional, it can be used with all battery models.

This system includes a 20, 25 or 50 litre tank for demineralized water, with the option of placing it in a painted steel support that allows the tank to be positioned easily at a height of approx. 1.70 metres.

The tank is equipped with a tap and a 3 m transparent hose, diameter 10x14. The hose can be connected to a refilling gun or to the centralized refilling coupling.

### 20 LITRE REFILLING CONTAINER WITH TAP



20 LITRE CONTAINER WITH TAP  
CODE 2000.A15



20 LITRE CONTAINER WITH TAP AND SUPPORT  
CODE 2000.56

## 25 LITRE REFILLING CONTAINER WITH TAP



25 LITRE CONTAINER WITH TAP  
CODE: 4000.13



25 LITRE CONTAINER WITH TAP AND  
SUPPORT CODE: 4000.11

## 50 LITRE REFILLING CONTAINER WITH TAP



50 LITRE CONTAINER WITH TAP  
CODE: 2000.22



50 LITRE CONTAINER WITH TAP AND  
SUPPORT CODE: 2000.22S

## REFILLING ACCESSORIES



FLOW INDICATOR CODE 4000.25

MALE QUICK COUPLING CODE 4000.23

DIAM. 8/10/12


FEMALE QUICK COUPLING CODE 4000.24

DIAM. 8/10/12

AM

AM

## Container installation diagram

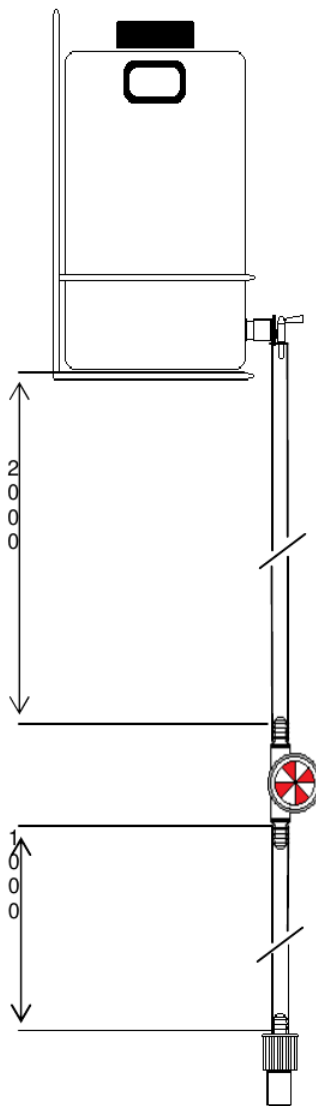


A-4000.13

B-4000.42

C-4000.25

D-4000.23

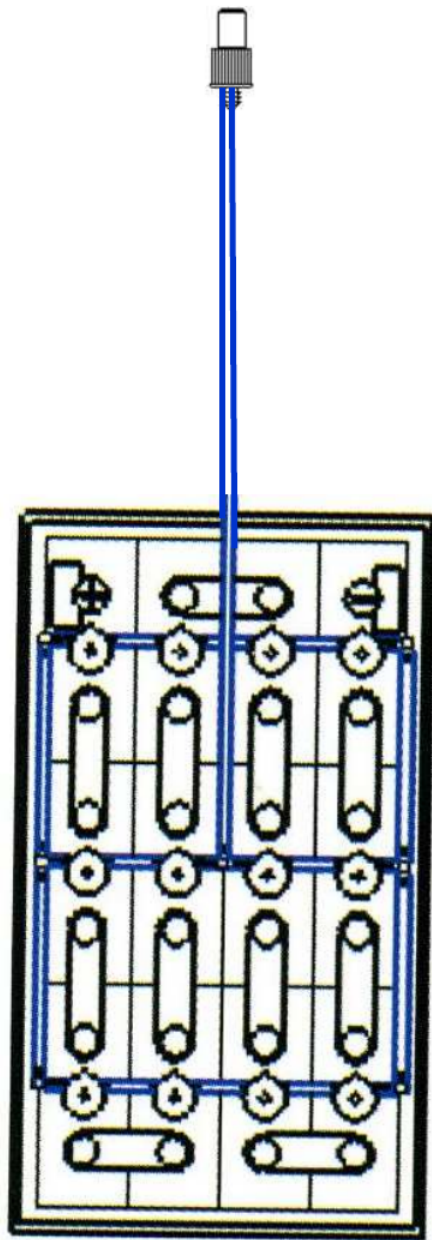

← E-4000.24

